


MS561LC-eDP-30P is available online at
<http://www.lcdparts.net/WHSDetail.aspx?ProductID=4628>

How to Use MS561LC-eDP-30P

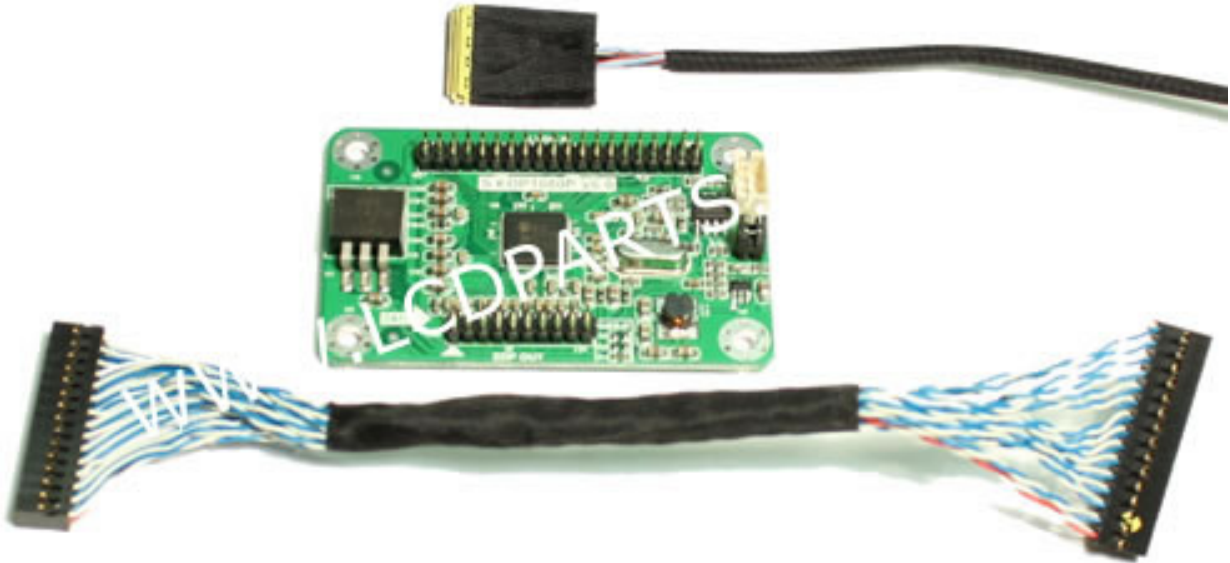

- Identify Makes and part number of the LCD Panel
- Obtains setting parameter according to LST03/LST04 Cross Table
- Apply setting to LST03/LST04 and set B+ to 5V DC*
- Connect 36 pin wire harness to LST03/LST04 *
- Obtain jumper setting parameter Online and apply to MS561LC*
- Connect 12V DC to LST03/LST04 and Turn it on

Caution:

** LST04 B+ must be set on 5V for testing all 3.3V and 5V LED screen*

**When connect 36 pin wires, be sure the white dot face up.*

** MS561LC jumper setting parameters is available at the bottom of this page*

<http://www.lcdparts.net/WHSDetail.aspx?ProductID=4628>

***Cross Table is available online at**

<http://www.lcdparts.net/LST04table.aspx>

<http://www.lcdparts.net/LST03table.aspx>

Instruction by Video

<http://www.lcdparts.net/WHS.aspx>

MS561LC-eDP-30P is available online at
<http://www.lcdparts.net/WHSDetail.aspx?ProductID=4628>